





Automatic water-refill of the vaporizer by a servo-controlled mechanical float-valve in a external refill-box by the local water connection.

The connection to the steam-box is made by a metal-flexhose with $\frac{1}{2}$ " connection.

The external refill-box must be mounted, due to the communicating tank systems (Steam-/refill-box) with the upper edge,

Operation:

 Communicating tank system
The swim-body in the external refill-box regulates the level of the water and opens the inlet-valve even if the level drops slightly.


→ continuous vaporizer operation

Premise/Note:

Local water connection with existing stop-valve.

at the same height as the Steam-box and must be installed outside the hot air area of the Saunaheater. By rotating the swim-body in the refill-box, the water level can be additionally regulated.

The external refill-box can be mounted on the Saunaheater/ Vaporizer at the side, at the back or next to. When ordered and delivered with a *Lang's* Vaporizer system, it is already factory-assembled.

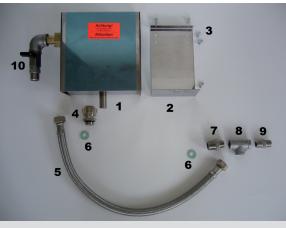

Technical Datas:

Dimensions: Metal-flex-hose: Refill-box: Capacity: Connection: Pressure: ca. 170/260 x 100 x 170 mm - W x D x H 500 mm - ½" connection Stainless steel ca. 1,0 Litre ½" maximum 10 bar

If it is a higher pressure there must be installed a pressure-reducer.

<u>Note:</u> The regulation of DIN EN 1717 "Protection against pollution of potable water installations" must be observed! Inform yourself about this at your provider or in the sanitary trade.

Components:

- 1 = External Refill-box with mech. float-valve and casing in Chromium-steel.
- 2 = Support bracket
- 3 = Mounting screws
- $4 = Cutting-pipe-fitting with \frac{1}{2}$ connection
- $5 = Metal-flex-hose 500 mm \frac{1}{2}$ connection
- 6 = Gaskets for Metal-flex-hose
- 7 = Reduce-double-nipple 3/8"-1/2"
- 8 = T-piece (Stainless steel) 3/8"
- 9 = Pipe-doùble-nipple 3/8"
- 10 = Service shut-off tap with $\frac{1}{2}$ connection

Note: All screw-connections must be sealed with Teflon sealing tape.